


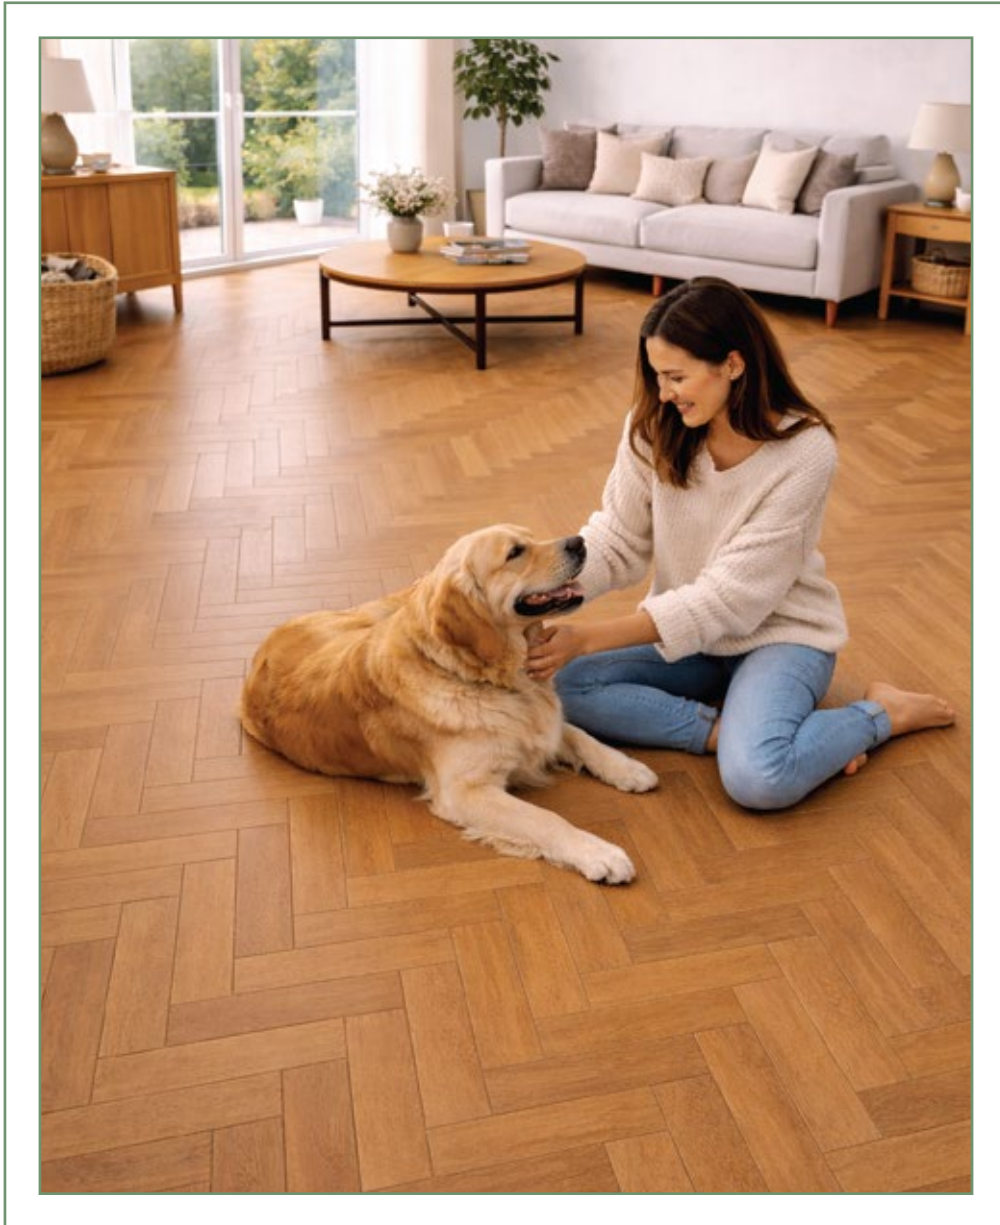


Beautiful Made Easy



ESSENCE

8.0MM HDF HERRINGBONE AC-4


UNIQUE FEATURES

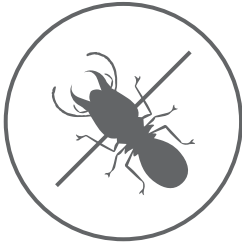

Termite Resistant



Environment
Friendly

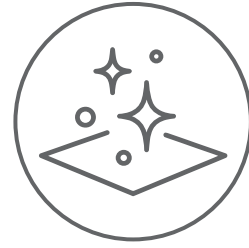

Easy To Clean Floor



Glue free




Easy Maintenance




Cigarette Burn
Resistant

INSTALLATION PATTERN

Herringbone

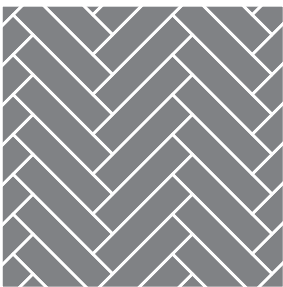


Double Herringbone

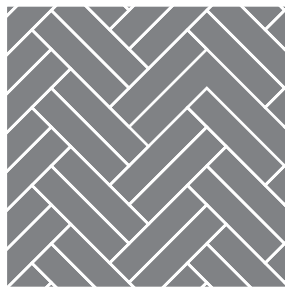


Basket Wave




Diagonal Basket Wave

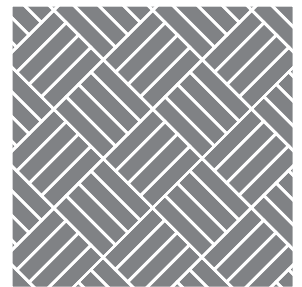

Diagonal Herringbone

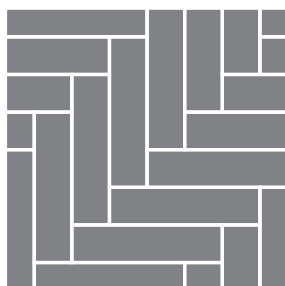

Brick

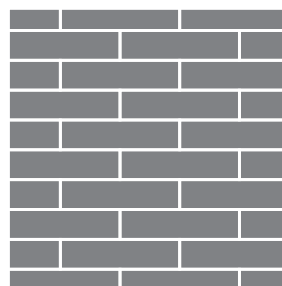



*Actual color of the product may vary due to batch difference

REAGAL BROWN OAK
HB-4007
Size : 23.62" x 3.93" x 8.0 mm

32 pcs / Carton
(16A + 16B)
(1.92 Sqmtr)



*Actual color of the product may vary due to batch difference

MIST OAK
HB-4008
Size : 23.62" x 3.93" x 8.0 mm

32 pcs / Carton
(16A + 16B)
(1.92 Sqmtr)



*Actual color of the product may vary due to batch difference

DESERT OAK
HB-4009
Size : 23.62" x 3.93" x 8.0 mm

32 pcs / Carton
(16A + 16B)
(1.92 Sqmtr)



*Actual color of the product may vary due to batch difference

URBAN WALNUT
HB-4010
Size : 23.62" x 3.93" x 8.0 mm

32 pcs / Carton
(16A + 16B)
(1.92 Sqmtr)



*Actual color of the product may vary due to batch difference

WARM SAND OAK
HB-4011
Size : 23.62" x 3.93" x 8.0 mm

32 pcs / Carton
(16A + 16B)
(1.92 Sqmtr)



*Actual color of the product may vary due to batch difference

CAMEL OAK
HB-4012
Size : 23.62" x 3.93" x 8.0 mm

32 pcs / Carton
(16A + 16B)
(1.92 Sqmtr)



Beautiful Made Easy

ESSENCE

8.0MM HDF HERRINGBONE AC-4

STANDARD INSTALLATION GUIDELINE

1. **Measurement:** Check the room dimension by getting it measured by a professional installer.
2. **Prepare Subfloor:** Ensure the subfloor is clean, dry, and level. Repair any imperfections and remove debris.
3. **Acclimate Planks:** Let the luxury vinyl planks acclimate to the room for at least 48 hours before installation.
4. **Cutting Planks:** Use a utility knife or saw to cut planks. Measure and mark accurately.
5. **Layout Planning:** Plan the layout, ensuring the first row is straight. Avoid narrow plank widths at walls.
6. **Adhesive Application:** Use the recommended trowel size adhesive and apply to the floor and expose some adhesive across the back of the sheet. The adhesive should be allowed to dry before fixing the flooring sheet by applying pressure evenly on the floor.
7. **Cleaning:** Clean excess adhesive immediately and mop the floor with clean water. Avoid using adhesive cleaners, ammonia-based products and harsh chemical as they can damage the Vinyl's surface.

